


McBerns Odour Filter.

Suits 50mm Vents from Grease Traps, Septics, Domestic Treatment Systems and Sewers.

Installation Instructions

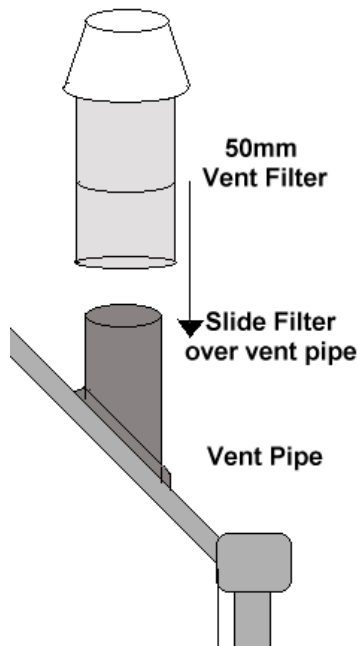

**Please read Safety Advice/First Aid below
before proceeding with installation:**

Install as follows:

1. Remove filter from plastic bag and follow instructions on illustration (**CAUTION Ensure adequate ventilation when removing filter from pack and installing.**)
2. Remove old vent cap then slide Filter over vent pipe.
We recommend that filter body be secured to vent pipe with screws or glued.

Safety Advice:

Keep out of reach of children

Ensure adequate ventilation when removing filter from pack and installing.

Do not puncture the container or otherwise interfere with the product as this will reduce its effectiveness or produce harmful vapours.

First Aid Information

Poison Information Centre in each State capital city can provide additional assistance for Scheduled Poisons: Phone (Australia 13 1126)

Ingestion: Rinse mouth with water. Do **NOT** induce vomiting. Seek medical assistance.

Eyes & Skin: Be careful to avoid contact with contents, or fumes from the filter as they may cause irritation to eyes, skin or breathing passages. If contact occurs wash affected area with plenty of water.

Inhalation: Remove victim from exposure. Remove contaminated clothing and loosen remaining clothing. Allow patient to assume most comfortable position and keep warm. Keep at rest until fully recovered.

Seek medical advice if symptoms persist.

Manufactured by:
McBerns Pty Ltd (ABN 060984107)
PO Box 304 Yandina Qld 4561 Australia
Ph: 61 (0)7 54467167 Fax: 61 (0)7 54467162
Email: mail@mcberns.com